

# D900 SERIES PUSHBUTTON LOCKS

**SECURITY AND DURABILITY IN AN AFFORDABLE PACKAGE**

- 6) Press buttons firmly and deliberately in the desired order for the new combination. You should hear an audible click when pushing the buttons. If the buttons do not click, turn the knob to the clear position, release and begin again.



- 7) Rotate knob clockwise to the unlock position. The new combination has been set. If knob does not rotate. Go back to step #2.



- 8) Close application and rotate knob counter-clockwise to the clear position and release (the knob will spring back to the lock position).



*\* If steps are executed incorrectly or out of sequence, clear lock, enter existing combination, rotate knob to unlock and start step sequence over.*

## TROUBLESHOOTING

PROBLEMS	POSSIBLE CAUSES	SOLUTIONS
1) Knob will not turn after current combination has been entered.	a) Combination was entered incorrectly or buttons were not pressed firmly enough.	a) Turn knob counter-clockwise to clear buttons, and re-enter combination, making sure each button clicks when pushed.
	b) The knob was turned the wrong way.	b) Re-enter combination and turn the knob clockwise to unlock position.
2) After entering the current combination, the reset button will not depress all the way.	a) Combination was entered incorrectly or buttons were not pressed firmly enough.	a) Turn knob counter-clockwise to clear buttons, and re-enter combination, making sure each button clicks when pushed.
3) After depressing reset button and entering the new combination, the knob will not turn.	a) The knob was turned the wrong way or the buttons were not cleared before the new combination was entered.	a) Turn knob counter-clockwise to clear buttons, re-enter combination, depress reset button, turn knob counter-clockwise to clear buttons, enter new combination and turn knob clockwise to unlock position.
4) Buttons do not click when pressed.	b) The buttons were already pressed and not cleared.	b) Turn knob counter-clockwise to clear buttons.
	b) The buttons were not pressed firmly enough.	b) Turn knob counter-clockwise to clear buttons, then press each button until it clicks.

**Illinois Lock Company**  
A division of the Eastern Company

301 West Hintz Road  
Wheeling, Illinois 60090  
Phone: 847-537-1800 • Fax: 847-537-1881  
e-mail: For Sales: sales@illinoislock.com  
For Technical Support: engineering@illinoislock.com  
internet: www.illinoislock.com